

TROUBLE SHOOTING

If the unit doesn't operate...	Check that the batteries are installed correctly. or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the unit malfunctions...	Install new batteries.

IMPORTANT INFORMATION

Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of the European Toy safety directive.

Warranty:

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

InspirationWorks UK Ltd

Charlotte Court
Proctor Way
LUTON
Bedfordshire
LU2 9PE
UK



facebook



www.inspirationworks.co.uk

www.firemansamonline.com

© 2011 CIDE Toys - www.cidetoys.com

© 2012 Prism Art & Design Limited. The Fireman Sam name and character are trademarks of Prism Art & Design Limited.
© HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

V01
April 2012
Printed in China
Made in China




WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE



AGE 2+

SAM'S READY FOR ACTION T.V.

Instruction manual

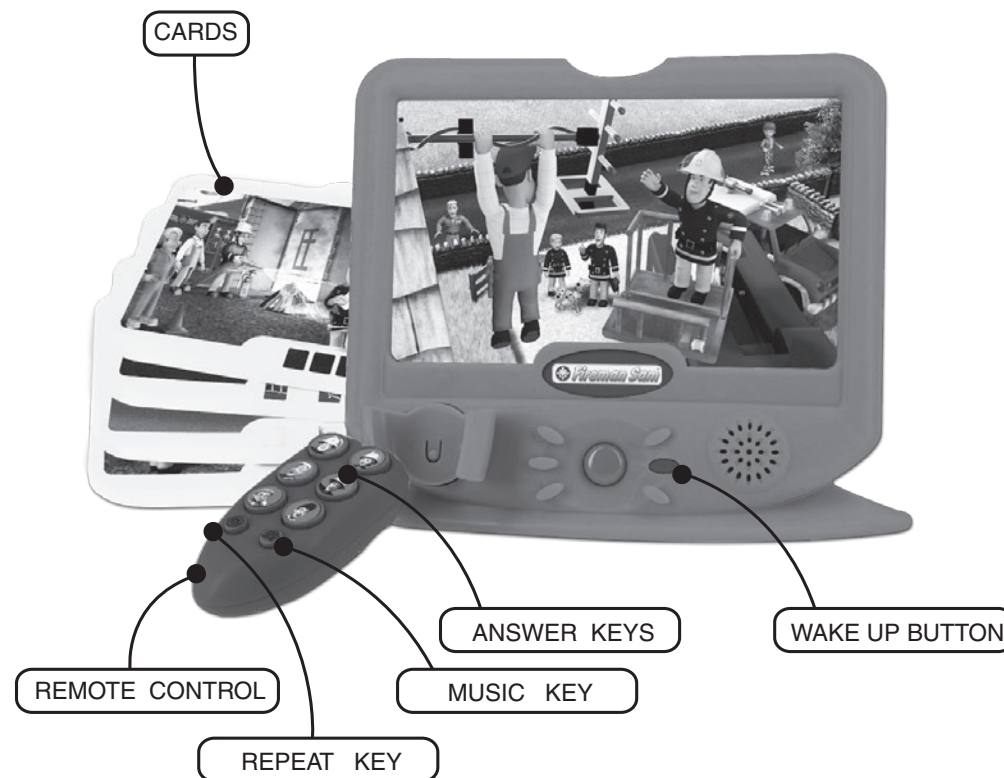

Important information

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for further reference.
- **WARNING:** All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- **IMPORTANT:** for additional safety, check toys regularly for signs of damage during use.

CONTENTS

- Unit
- Remote Control
- 2 feet for unit
- Instruction Manual
- 4 double sided Cards

HOW TO PLAY

Before playing with Sam's Ready for Action TV, clip the two feet into the back of the unit to make it stable.

To turn the TV on and play with Fireman Sam, either press the blue wake up button on the front of the unit or insert one of the 4 double-sided cards into the TV screen.

- If you press the wake up button and a card has already been inserted, Fireman Sam will ask you questions about the scene on the card.
- If you press the wake up button and no card has been inserted, Fireman Sam will ask you questions about the scene on the sticker in the unit.

Fireman Sam will ask you questions about the different scenes you insert into the TV screen, teaching you all about colours, sounds, positions in space, observation skills and all about his friends!

Use the character answer keys on the remote control to answer Fireman Sam's questions. You have three chances to answer correctly before he asks you a different question. Press the repeat key at any time during the game and Fireman Sam will ask you the question again.

Press the music key at any time during the game and the unit will play music from the Fireman Sam TV series.

When you have finished playing, store cards in the slot in back of the TV, and clip remote control onto the front.



Sam to the rescue!



Concert at the Fire Station



Training Day



Lift Up Elvis!



Rescue in the Forest



Let's go Team!



Norman causing mischief



Mountain Rescue Centre



Day out in the mountains



Turning off the unit

The unit can be turned off at any time by pressing the blue wake up button.

To preserve battery life, the unit will also turn off automatically if left idle for three minutes. To re-activate the unit, press the wake up button.

HOW TO CHANGE BATTERIES

1. This product requires 2 x AA-LR6-AM3 batteries for the unit and 2xLR44 for the RC.
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 2 x AA-LR6-AM3 batteries and 2x LR44 into the respective compartments, ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Should the batteries have no polarity markings, the flat side of the battery should always be visible when batteries are in place.
7. Reassemble the battery cover and tighten the screw to secure.
8. Do not over tighten.

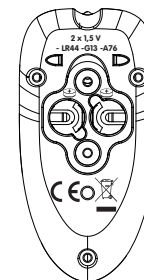

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Keep small batteries out of the reach of young children.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries.
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway:
 - o Rechargeable batteries shall be charged only under the supervision of an adult.
 - o Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.